

## Dado LED Installation Instructions

1. Mount the channel, end base and switch as per DaDo Installation Instructions 342253-01. Fix a mounting sticker centrally to the front of the LED strip near the wiring end.




2. Centralise the LED strip on top of the switch and press each end of the sticker onto the aluminium channel.



3. Push the overlapping ends of the sticker into the cover-mounting recess.



4. Repeat the procedure fixing mounting stickers approximately every 150mm to 300mm. Ensure the mounting stickers do not obstruct the LEDs.

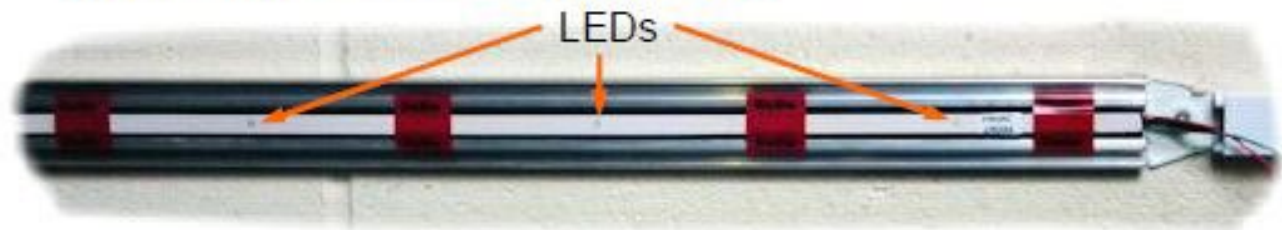


5. Connect the external wiring for the LEDs. Ensure that +ve voltage is connected to the red wire and -ve is connected to the green wire.

6. Insert the unstripped wires fully into the grease-filled IDC connectors. Squeeze the connector with pliers to make the connection. Visually check there is a good connection with both wires.



Red Wire	+ve
Green Wire	-ve
Supply Voltage	12vdc

### 1. Mount the Aluminium channel

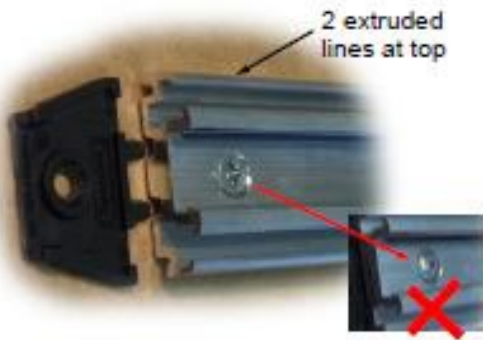

Use No.8 CSK screws (not raised head)

### 2. Mount the end-piece base



Engage tabs into channel. Break off end wall if not needed

### 3. Insert the switch from front



Hook switch under top retaining lip



Lift switch over bottom retaining lip

**To remove the switch, carefully carry out the reverse of the above**

### 4. Mount the top cover



Engage top and bottom clip profile into channel



Clip ends of cover under channel ends

### 5. Mount the end caps



Clip on end cap engaging raised bosses into recesses



Assembly complete